

# Quick start: PEM575

## Quick start

**This short operating instruction does not replace the manual!**

You will find the manual on the website  
[www.bender-de.com](http://www.bender-de.com)

Make sure that the personnel has read this manual and understood all instructions relating to safety.



## Intended use

The universal measuring device PEM575 is suitable for


- the analysis of energy and power (Power Analyzer)
- monitoring of the power supply quality (Power Quality)
- data recording for energy management (Energy Management).

As a compact device for front panel mounting, it is suitable to replace analogue indicating instruments. The PEM575 is suitable for 3 and 4-wire systems and can be used in TN, TT and IT systems. The current measurement inputs of the PEM are connected via external  $\pm 1$  A or  $\pm 5$  A measuring current transformers.

Measurement in medium and high-voltage systems are principally carried out using measuring current and voltage transformers. The accuracy of the active energy metering corresponds to class 0.2 S in compliance with the DIN EN 62053-22 (VDE 0418 Part 3-22):2003-11.

## Installing the device

Front-panel mounting (front view, side view, panel cutout)

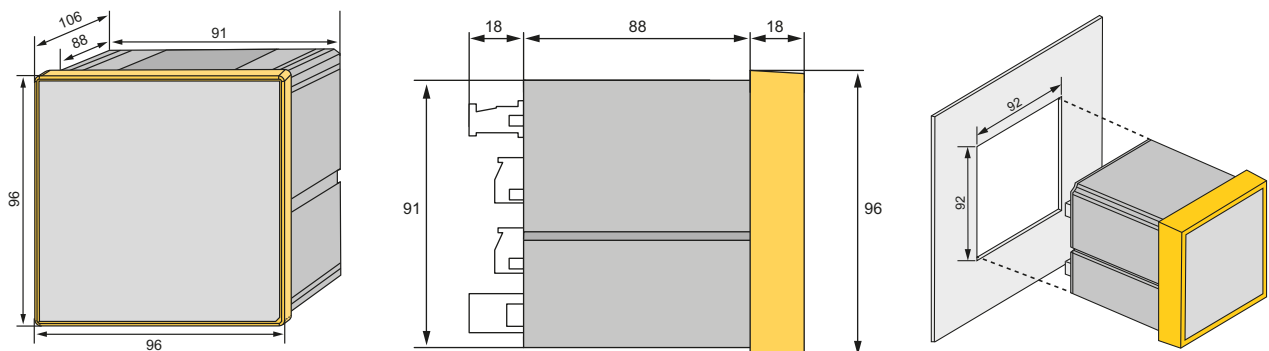

A front-panel cutout of 92 mm x 92 mm is required for the device.

1. Insert the device into the installation opening of the front panel.
2. Insert the two installation clips into the equipment rail from behind.
3. Push the installation clips towards the front panel and tighten the screws by hand.
4. Check the device to ensure that it is firmly mounted in the front panel.

## Scope of delivery

- 1 PEM575
- Safety instructions
- This short operating instructions
- 1 sealing frame "IP54"

## Safety instruction




### **Danger of electric shock!**



Follow the basic safety rules when working with electricity.

**Consider the data on the rated voltage and supply voltage as specified in the technical data!**


## Connection of the device
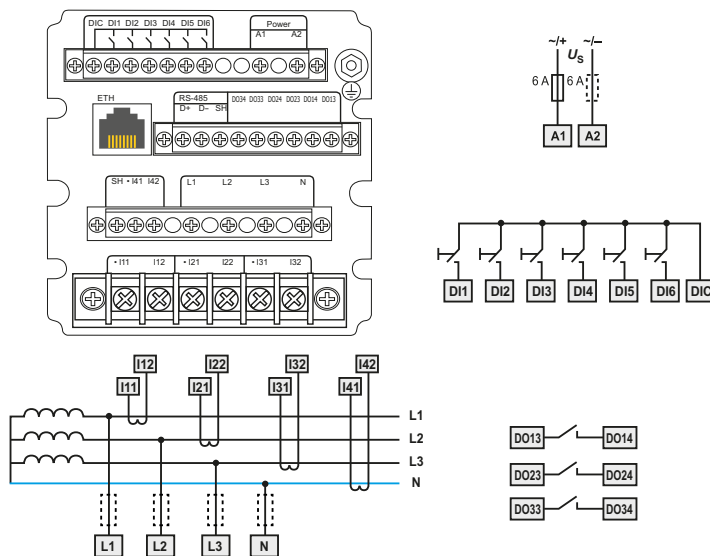
### Wiring diagram


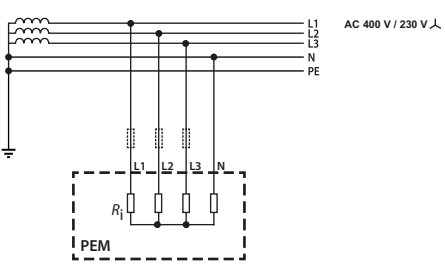
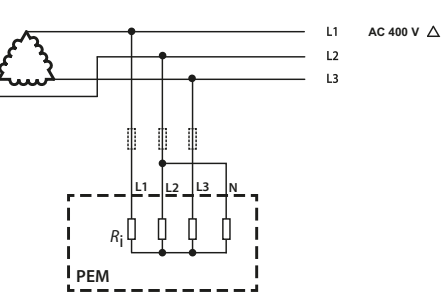
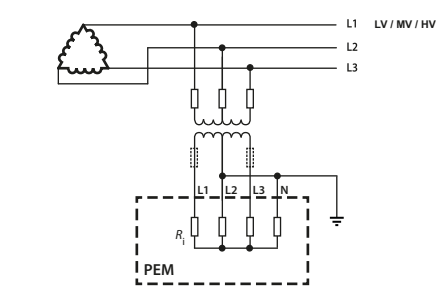


| Terminal                                                                                  | Description                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A1, A2,  | Connection to supply voltage, 6 A fuse (when supplied by IT systems, both phase conductors have to be protected).                                                                                                 |
| DI1...DI6, DI13...DI16                                                                    | Digital inputs                                                                                                                                                                                                    |
| DO13, DO14, DO23, DO24, DO33, DO34                                                        | Digital outputs (N/O contacts)                                                                                                                                                                                    |
| I11, I12, I21, I22, I31, I32                                                              | Connection to the system to be monitored                                                                                                                                                                          |
| D+, D-, SH                                                                                | Connection RS-485 bus                                                                                                                                                                                             |
| L1, L2, L3, N                                                                             | Measuring voltage inputs: The measuring leads should be protected with appropriate fuses.                                                                                                                         |
|          | <b>Modbus TCP: Pin assignment</b> <ul style="list-style-type: none"> <li>1 Transmit Data +</li> <li>2 Transmit Data -</li> <li>3 Receive Data +</li> <li>4, 5, 7, 8 not used</li> <li>6 Receive Data -</li> </ul> |

### Connection

1. Connect the device according the wiring diagram. The connections are located on the rear of the device. Connect the PEM575 to the supply voltage (terminals A1 and A2 resp. +/-). Connect terminal " " to the protective conductor.
2. Line protection: 6 A fuse recommended. If being supplied from an IT system, both lines have to be protected by a fuse.
3. Connection to the RS-485 bus is made via the terminals D+, D- and SH. Up to 32 devices can be connected to the bus. The maximum cable length for the bus connection of all devices is 1200 m.

## Connection diagram voltage inputs

| Three-phase 4-wire system (TN, TT, IT systems)                                                                         | Three-phase 3-wire system                                                                                                                                                                                                                                                                                                                                                                      | Connection via voltage transformers                                                                                                                                                           |
|------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The PEM can be used in three-phase 4-wire systems, independent of the type of distribution system (TN, TT, IT system). | The PEM can be used in three-phase 3-wire systems. The line conductor voltage must not exceed AC 400 V.<br> When used in 3-wire systems, the connection type ( <b>TYPE</b> ) has to be set to delta connection ( <b>DELTA</b> ). For this purpose, <b>the measuring inputs L2 and N are to be bridged</b> . | The coupling via measuring current transformers allows the use of the measuring device in medium and high voltage systems. The transformation ratio can be adjusted in the PEM575 (1...2200). |
|                                     |                                                                                                                                                                                                                                                                                                            |                                                                                                          |

## Commissioning of the device

### Check proper connection

Observe the relevant standards and regulations that have to be observed for installation and connection as well as the manual of the respective device.

### Before switching on

Before switching on think carefully about these questions:

1. Does the connected supply voltage  $U_S$  correspond to the nameplates information?
2. Is the nominal system voltage of the measuring current transformer not exceeded?
3. Does the measuring current transformer's maximum current correspond to the nameplate information of the connected device?

### After switching on

After switching on, proceed as follows:

1. Connect the supply voltage.
2. Set the bus address/IP address.
3. Set the CT transformer ratio (for each channel).
4. Change the measuring current transformer's counting direction, if required.
5. Set the nominal voltage (line-to-line voltage  $U_{LL}$ ).
6. Select wye connection or delta connection.

## Display and operating controls



### Key

LED "kWh" and LED "kvarh": pulse outputs

"V/I" button: displays mean values and total values (current, voltage);  
In the menu:  
moves the cursor to the left if the parameter to be changed is a numeric value

"POWER" button: displays energy-related parameters.

In the menu: to move up to the next entry;  
in case of numeric values: increments the value.

"HARMONICS" button: displays harmonics.

In the menu: moves down to the next entry;  
in case of numeric values: decrements the value

"ENERGY" button:

Press > 3 s:

toggles between the setup menu and the standard mode.

Displays measuring values: Active and reactive energy import/active and reactive energy export (line 5).

In the menu: selects the parameters for modification;  
confirms parameter change.


## Start

Pressing the "ENERGY/OK" button enters the setup mode (> 3 s). Pressing the "ENERGY/OK" again (> 3 s) returns to the display mode.



A correct password must be entered before changes are allowed. (factory setting: 0)

The following diagram will help you to familiarise yourself with the menu:

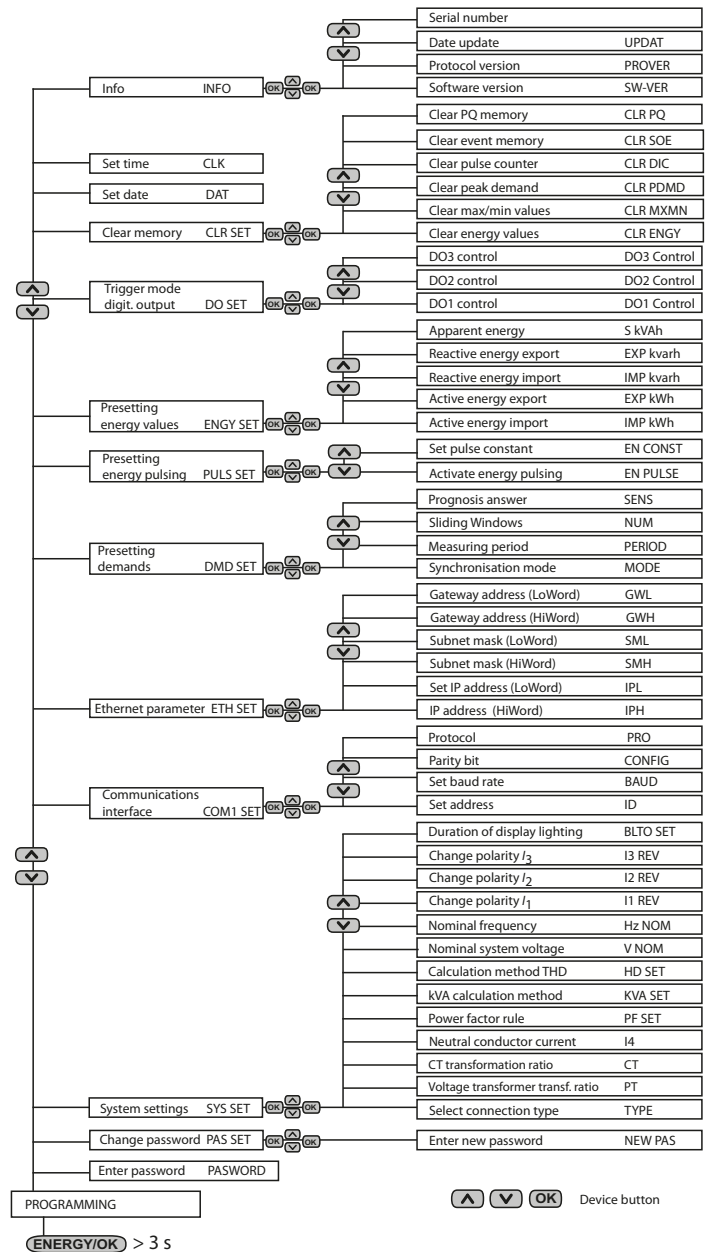

## Data display via buttons

A large number of measuring values can be obtained from the device via the buttons without having to use the communications interface. Which button is to be activated to obtain the individual values is described in more detail in the manual.

## Data display via communication interface


All measuring values can be obtained via the communications interface. Details on the Modbus register assignment can be found in the manual.

## Setup example

Measuring current transformer setting  
transformation ratio 1000:5 (= 200)

| Button          | Indication display | Description                            |
|-----------------|--------------------|----------------------------------------|
| ENERGY/OK > 3 s | PROGRAMMING        |                                        |
| ∧               | PASSWORD ****      |                                        |
| OK              | PASSWORD 0         | 0 flashes                              |
| OK              | PASSWORD 0         | 0 Factory setting                      |
| ∧               | PAS SET NO         |                                        |
| ∧               | SYS SET NO         |                                        |
| OK              | SYS SET NO         | NO flashes                             |
| ∧ or ∨          | SYS SET YES        | YES flashes                            |
| OK              | SYS SET YES        |                                        |
| ∧               | TYPE WYE           | Factory setting                        |
| ∧               | PT 1               | Factory setting                        |
| ∧               | CT 1               | Factory setting                        |
| OK              | CT 1               | 1 flashes (units place)                |
| ∨               | CT 0               | 0 flashes (units place)                |
| <               | CT 00              | 0 on the left flashes (tens place)     |
| <               | CT 0 0             | 0 on the left flashes (hundreds place) |
| ∧∧              | CT 200             | 2 flashes                              |
| OK              | CT 200             | CT ratio 200 adjusted                  |
| ENERGY/OK > 3 s | Standard display   |                                        |

## Standard display indications

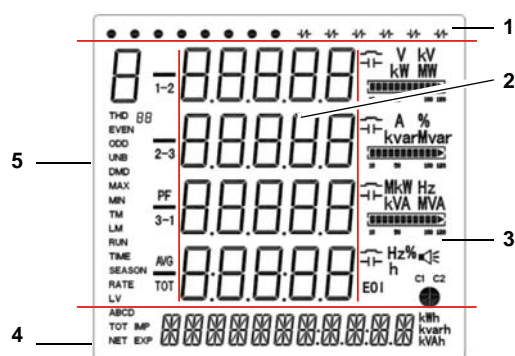



























## Standard display indications (continuation of the left column)

### Legend to the display areas

- Shows the status of the digital inputs and outputs (DI Status, DO Status)
- Measured values
- Harmonic Distortion HD, voltage unbalance (unb), quadrant, measurement units
- Shows energy information such as active energy (import, export, net energy and total energy in kWh), reactive energy (import, export, energy net amount and total energy in kvar), apparent energy ( $S_{ges}$  in kVAh)
- Shows parameters such as voltage, current, fundamental component, power, total harmonic distortion THD, TOHD, TEHD (2. to 31. harmonic), k-factor, unbalance (unb), phase angle for voltages and currents, demands.

### Description of standard display indications (areas 1, 3 and 4)

| Area | Segments                                                                             | Symbol description                                                                    |                                                         |                                         |
|------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------|-----------------------------------------|
| 1    |    |    | DI open                                                 |                                         |
|      |                                                                                      |    | DI closed                                               |                                         |
| 3    |   |    | DO open                                                 |                                         |
|      |                                                                                      |    | DO closed                                               |                                         |
|      |                                                                                      |    | V, kV, A, %, Hz<br>Measurement units for U, I, THD, f   |                                         |
|      |                                                                                      |    | kW, MW, kvar, kVA, MVA<br>Measurement units for P, Q, S |                                         |
| 4    |  |   |                                                         | Current value expressed as a percentage |
|      |                                                                                      |   | inductive, capacitive                                   |                                         |
|      |                                                                                      |  | C1 Status communications interface                      |                                         |
|      |                                                                                      |  | Alarm symbol                                            |                                         |
| 4    |  |  | Quadrant                                                |                                         |
|      |                                                                                      |  | IMP kWh Active energy import                            |                                         |
|      |                                                                                      |  | EXP kWh Active energy export                            |                                         |
|      |                                                                                      |  | NET kWh Active energy net amount                        |                                         |
| 4    |  |  | TOT kWh Total active energy                             |                                         |
|      |                                                                                      |  | IMP kvarh Reactive energy import                        |                                         |
|      |                                                                                      |  | EXP kvarh Reactive energy export                        |                                         |
|      |                                                                                      |  | NET kvarh Reactive energy net amount                    |                                         |
| 4    |  |  | TOT kvarh Total reactive energy                         |                                         |
|      |                                                                                      |  | h Apparent energy                                       |                                         |


All rights reserved.  
Reprinting only with permission  
of the publisher.  
Subject to change!  
© Bender GmbH & Co. KG

Bender GmbH & Co. KG  
Londorfer Str. 65 • 35305 Grünberg • Germany  
Postfach 1161 • 35301 Grünberg • Germany



BENDER Group

Tel.: +49 6401 807-0  
Fax: +49 6401 807-259



D0001600QXXEN

E-Mail: [info@bender-de.com](mailto:info@bender-de.com)  
Web: <http://www.bender-de.com>