



# COMTRAXX® COM462RTU



**BMS-Modbus RTU gateway for the connection  
of BMS-capable Bender devices  
to the Modbus RTU**  
**Software version: D415 V1.2x**



**Bender GmbH & Co. KG**

P.O. Box 1161 • 35301 Grünberg • Germany  
Londorfer Str. 65 • 35305 Grünberg • Germany  
Tel.: +49 6401 807-0 • Fax: +49 6401 807-259  
E-mail: [info@bender.de](mailto:info@bender.de) • [www.bender.de](http://www.bender.de)

© Bender GmbH & Co. KG

All rights reserved.

Reprinting and duplicating only with permission of the publisher.

Subject to change!

Photos: Bender archives

## Table of Contents

<b>1. Important information</b>	<b>7</b>
1.1 How to use this manual	7
1.2 Technical support: Service and support	8
1.2.1 First level support	8
1.2.2 Repair service	8
1.2.3 Field service	9
1.3 Training courses	9
1.4 Delivery conditions	9
1.5 Inspection, transport and storage	10
1.6 Warranty and liability	10
1.7 Disposal	11
1.8 Quick-start guide	11
<b>2. Safety instructions</b>	<b>13</b>
2.1 General safety instructions	13
2.2 Work activities on electrical installations	13
2.3 Intended use	14
2.4 Address setting and termination	14
<b>3. Product description</b>	<b>15</b>
3.1 Scope of delivery	15
3.2 Short description	15
3.3 Device features	15
3.4 Possible applications	15
3.5 Details about the Modbus RTU	16
<b>4. Installation, connection and commissioning</b>	<b>17</b>
4.1 Preliminary considerations	17
4.2 COM462RTU on the internal BMS bus	18

4.3	Installing the device .....	19
4.4	Connecting the device .....	20
4.5	Commissioning .....	22
<b>5.</b>	<b>Operation and configuration .....</b>	<b>23</b>
5.1	Display and operating elements .....	23
5.1.1	Automatic contrast setting for the display .....	24
5.1.2	Display in standard mode .....	24
5.1.3	Display in menu mode .....	25
5.2	Factory settings .....	25
5.3	Settings on the device .....	26
5.3.1	Operating example: Setting BMS address .....	26
5.4	Display INFO list .....	28
<b>6.</b>	<b>Data access using Modbus RTU protocol .....</b>	<b>29</b>
6.1	Exception code .....	29
6.2	Modbus requests .....	30
6.3	Modbus responses .....	30
6.4	Structure of the exception code .....	31
6.5	Modbus address structure for BMS devices .....	31
<b>7.</b>	<b>Modbus process image in the memory of the COM462RTU .....</b>	<b>33</b>
7.1	Querying data .....	33
7.1.1	Modbus function code .....	33
7.1.2	How are the memory areas organised? .....	33
7.2	Memory scheme of the process image .....	35
7.2.1	BMS device address assignment on the Modbus .....	35
7.2.2	Memory scheme of an individual BMS device .....	36
7.2.3	Device type .....	38
7.2.4	Timestamp .....	39
7.2.5	Common alarm and device failure .....	39
7.2.6	Channels 1 to 32 with analogue and/or digital values .....	40
7.2.6.1	Float = Floating point value of the BMS channels .....	40

7.2.6.2	AT&T = Alarm type and test type (internal/external) .....	41
7.2.6.3	R&U = Range and unit .....	43
7.2.6.4	Channel description .....	45
7.2.6.5	Channel 33 to 64 .....	46
7.3	Reference data records of the process image .....	47
7.3.1	Address assignment of the reference data record .....	47
7.3.2	Reference value on channel 1 .....	48
7.3.3	Reference value on channel 2 .....	49
7.3.4	Explanation of how to access floating point values .....	49
7.4	Channel descriptions for the process image .....	51
7.5	Modbus control commands .....	63
<b>8.</b>	<b>Technical data .....</b>	<b>67</b>
8.1	Tabular data .....	67
8.2	Dimension diagram .....	69
8.3	Standards, approvals, certifications .....	69
8.4	Ordering details .....	70
<b>9.</b>	<b>Troubleshooting .....</b>	<b>71</b>
9.1	Malfunctions .....	71
9.1.1	What should be checked? .....	71
9.1.2	Where to find help? .....	71
<b>INDEX</b>	<b>.....</b>	<b>73</b>



# 1. Important information

## 1.1 How to use this manual



This manual is intended for **qualified personnel** working in electrical engineering and electronics!

**Always keep this manual within easy reach for future reference.**

To make it easier for you to understand and revisit certain sections in this manual, we have used symbols to identify important instructions and information. The meaning of these symbols is explained below:



**DANGER**

This signal word indicates that there is a **high** risk of danger, that **will** result in **death** or **serious injury** if not avoided.



**WARNING**

This signal word indicates a **medium** risk of danger that **can** lead to **death** or **serious injury**, if not avoided.



**CAUTION**

This signal word indicates a **low-level risk** that **can** result in minor or **moderate injury** or **damage to property** if not avoided.



This symbol denotes information intended to assist the user in making **optimum use** of the product.

This manual has been compiled with great care. It might nevertheless contain errors and mistakes. Bender cannot accept any liability for injury to persons or damage to property resulting from errors or mistakes in this manual.

## 1.2 Technical support: Service and support

For commissioning and troubleshooting Bender offers you:

### 1.2.1 First level support

Technical support by phone or e-mail for all Bender products

- Questions concerning specific customer applications
- Commissioning
- Troubleshooting

**Telephone:** +49 6401 807-760\*  
**Fax:** +49 6401 807-259  
In Germany only: 0700BenderHelp (Tel. and Fax)  
**E-mail:** support@bender-service.de

### 1.2.2 Repair service

Repair, calibration, update and replacement service for Bender products

- Repairing, calibrating, testing and analysing Bender products
- Hardware and software update for Bender devices
- Delivery of replacement devices in the event of faulty or incorrectly delivered Bender devices
- Extended guarantee for Bender devices, which includes an in-house repair service or replacement devices at no extra cost

**Telephone:** +49 6401 807-780\*\* (technical issues)  
+49 6401 807-784\*\*, -785\*\* (sales)  
**Fax:** +49 6401 807-789  
**E-mail:** repair@bender-service.de



Please send the devices for **repair** to the following address:

Bender GmbH, Repair-Service,  
Londorfer Straße 65,  
35305 Grünberg

### 1.2.3 Field service

On-site service for all Bender products

- Commissioning, parameter setting, maintenance, troubleshooting for Bender products
- Analysis of the electrical installation in the building (power quality test, EMC test, thermography)
- Training courses for customers

<b>Telephone:</b>	+49 6401 807-752**, -762 **(technical issues) +49 6401 807-753** (sales)
<b>Fax:</b>	+49 6401 807-759
<b>E-mail:</b>	fieldservice@bender-service.de
<b>Internet:</b>	www.bender-de.com

\*Available from 7.00 a.m. to 8.00 p.m. 365 days a year (CET/UTC+1)

\*\*Mon-Thurs 7.00 a.m. - 8.00 p.m., Fr 7.00 a.m. - 13.00 p.m.

## 1.3 Training courses

Bender is happy to provide training regarding the use of test equipment. The dates of training courses and workshops can be found on the Internet at [www.bender-de.com](http://www.bender-de.com) -> Know-how -> Seminars.

## 1.4 Delivery conditions

Bender sale and delivery conditions apply.

For software products, the "Softwareklausel zur Überlassung von Standard-Software als Teil von Lieferungen, Ergänzung und Änderung der Allgemeinen Lieferbedingungen für Erzeugnisse und Leistungen der Elektroindustrie" (software clause in respect of the licensing of standard software as part of deliveries, modifications and changes to general delivery conditions for products and services in the electrical industry) set out by the ZVEI (Zentralverband Elektrotechnik- und Elektronikindustrie e.V.) (German Electrical and Electronic Manufacturers' Association) also applies.

Sale and delivery conditions can be obtained from Bender in printed or electronic format.

## 1.5 Inspection, transport and storage

Inspect the dispatch and equipment packaging for damage and compare the contents of the package with the delivery documents. In the event of damage in transit, please contact Bender immediately.

The devices must only be stored in areas where they are protected from dust, damp, and spray and dripping water, and in which the specified storage temperatures can be ensured.

## 1.6 Warranty and liability

Warranty and liability claims in the event of injury to persons or damage to property are excluded if they can be attributed to one or more of the following causes:

- Improper use of the device.
- Incorrect mounting, commissioning, operation and maintenance of the device.
- Failure to observe the instructions in this operating manual regarding transport, commissioning, operation and maintenance of the device.
- Unauthorised changes to the device made by parties other than the manufacturer.
- Non-observance of technical data.
- Repairs carried out incorrectly and the use of replacement parts or accessories not approved by the manufacturer.

- Catastrophes caused by external influences and force majeure.
- Mounting and installation with device combinations not recommended by the manufacturer.

This operating manual, especially the safety instructions, must be observed by all personnel working on the device. Furthermore, the rules and regulations that apply for accident prevention at the place of use must be observed.

## 1.7 Disposal

Abide by the national regulations and laws governing the disposal of this device. Ask your supplier if you are not sure how to dispose of the old equipment.

The directive on waste electrical and electronic equipment (WEEE directive) and the directive on the restriction of certain hazardous substances in electrical and electronic equipment (RoHS directive) apply in the European Community. In Germany, these policies are implemented through the "Electrical and Electronic Equipment Act" (ElektroG). According to this, the following applies:

- Electrical and electronic equipment are not part of household waste.
- Batteries and accumulators are not part of household waste and must be disposed of in accordance with the regulations.
- Old electrical and electronic equipment from users other than private households which was introduced to the market after 13th August 2005 must be taken back by the manufacturer and disposed of properly.

For more information on the disposal of Bender devices, refer to our homepage at [www.bender-de.com](http://www.bender-de.com) -> Service & support.

## 1.8 Quick-start guide

### Connection of the COM462RTU

If you are familiar with the installation and connection of electrical devices, particularly with Modbus RTU, you can start right away with the wiring diagram on page 20.

It may also be helpful to refer to the block diagrams representing an application example with an internal BMS bus (BMS=Bender measuring device interface) on page 18.

## Using the Modbus RTU functions

Information about this field can be found from page 29 onwards.

## 2. Safety instructions

### 2.1 General safety instructions

Part of the device documentation in addition to this manual is the enclosed "Safety instructions for Bender products".

### 2.2 Work activities on electrical installations



Only **qualified personnel** are permitted to carry out the work necessary to install, commission and run a device or system.



**DANGER**

#### **Risk of electrocution due to electric shock!**

Touching live parts of the system carries the risk of:

- An electric shock
- Damage to the electrical installation
- Destruction of the device

**Before installing and connecting the device, make sure that the installation has been *de-energised*.** Observe the rules for working on electrical installations.

If the device is used outside the Federal Republic of Germany, the applicable local standards and regulations must be complied with. The European standard EN 50110 can be used as a guide.

## 2.3 Intended use

The BMS-Modbus RTU gateway COM462RTU connects the serial Bender BMS bus to the serial Modbus RTU. The gateway converts alarms, measured values and statuses from the BMS bus to Modbus RTU. Control commands can be converted from Modbus RTU to BMS bus.

This allows connection to Modbus networks. The gateway is operated on the **internal** BMS bus.

## 2.4 Address setting and termination

In order to ensure proper functioning of the BMS-Modbus RTU gateway COM462RTU, correct address assignment and termination of the BMS bus and the Modbus RTU is of utmost importance.



**CAUTION**

*Assigning addresses that are already used by existing devices in the BMS or Modbus RTU networks concerned may cause serious malfunctions.*

Ensure correct address setting and termination of the COM462RTU. For details refer to "Commissioning" on page 22.

### Interface on the Modbus RTU side



*The COM462RTU is always operated as slave on the Modbus RTU side. Therefore, the COM462RTU and its Modbus RTU has to be communicated to the Modbus RTU master.*

### Interface on the BMS side:

COM462RTU can be operated as master or slave.

## 3. Product description

### 3.1 Scope of delivery

You will receive:

- the COM462RTU
- an operating manual

### 3.2 Short description

The BMS-Modbus RTU gateway COM462RTU contains a Modbus RTU slave that converts BMS data for a Modbus master.

A setting menu makes it possible to configure the COM462RTU using the setting menu (see "Commissioning" on page 22).

### 3.3 Device features

- Setting of address data for the BMS bus and Modbus RTU and date and time setting using the internal operating menu.
- Time synchronisation for all BMS bus devices
- Operation on the internal BMS bus
- Modbus RTU data access to the internal BMS bus, max. 150 BMS devices
- Commands can be sent from an external application (e.g. visualisation software) to BMS devices and measured values read.

### 3.4 Possible applications

- The use of professional visualisation programs by converting BMS data to Modbus RTU protocols.
- Observing and analysing Bender products that support communication, such as RCMS, EDS and MEDICS® systems.

### 3.5 Details about the Modbus RTU

The Modbus RTU (Remote Terminal Unit) field bus has been specified by Modicon, a company under the Schneider Automation brand and made available to the market license-free.

Modbus uses the serial hardware interface RS-485 and communicates via a two-wire, twisted copper wire. A transmission rate of 19200 baud is standard. Key data:

- Master-slave communication
- Up to 32 bus devices per network, or up to 247 bus devices (with repeater)
- Baud rate between 1200 and 57600 bit/s
- Diagnostics mechanisms



## 4. Installation, connection and commissioning



Only **qualified personnel** are permitted to carry out the work necessary to install, commission and run a device or system.



**DANGER**

### **Risk of electrocution due to electric shock!**

Touching live parts of the system carries the risk of:

- An electric shock
- Damage to the electrical installation
- Destruction of the device

**Before installing and connecting the device, make sure that the installation has been de-energised.** Observe the rules for working on electrical installations.



If you are familiar with the configuration of Modbus RTU networks, you can carry out the connection of the COM462RTU by yourself. **Otherwise please contact your EDP administrator!**

### 4.1 Preliminary considerations

1. Have all the questions as regards the installation been answered by the technician responsible for the installation?
2. The device is operated on the internal bus. Is the BMS address to be set known?

If, apart from the COM462RTU, an alarm indicator and test combination MK800 is connected to the internal bus, the COM462RTU **must not** have the address 1 (master).

You will find more detailed information on the BMS topic, in particular about the wiring of bus devices, in the separate document "BMS bus".

You can download the document from the download area of the website [www.bender-de.com](http://www.bender-de.com).

- Is the Modbus RTU address to be set known?

## 4.2 COM462RTU on the internal BMS bus

Bender systems such as EDS46x/49x, RCMS46x/49x and MEDICS communicate with each other via the Bender measuring device interface BMS. The BMS-Modbus RTU gateway COM462RTU provides the coupling between the BMS bus and Modbus RTU networks. The following block diagram illustrates the operation of the gateway in an internal BMS bus.

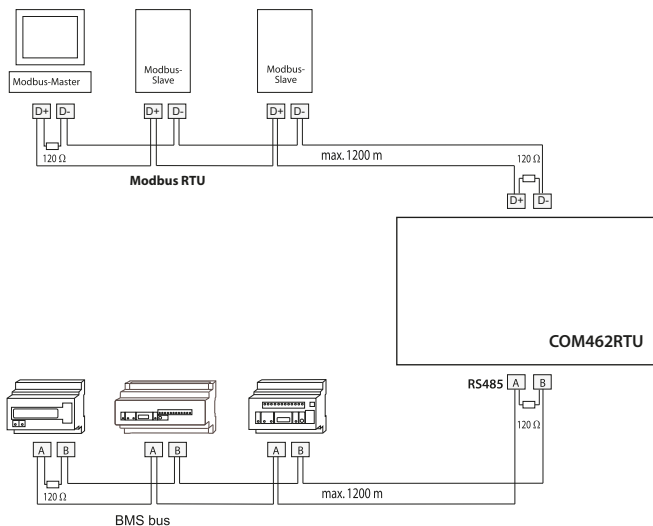


Fig. 4.1: Block diagram of a coupling between an **internal** BMS bus and Modbus RTU



### **Internal and external BMS bus**

*The majority of Bender devices communicate via the internal BMS bus.*

*Individual devices, such as MK800, TM800 or Bender panels can communicate via both the internal BMS bus (BMS i) and the external BMS bus (BMS e).*

*The BMS-Modbus RTU gateway COM462RTU can only communicate via the internal BMS bus (BMS i).*

## 4.3 Installing the device

Possible methods of mounting:

- DIN rail mounting
- Screw mounting with 2 x M4 (dimension diagram on page 69)



**WARNING**


*When installing the device, please take into consideration that the device is only to be used in locations that are protected from unauthorised entry! This can be installation in a switch cabinet, for example.*

## 4.4 Connecting the device

For UL applications, the following is to be observed:

- Supply voltage  $U_s$ ; see nameplate and ordering details
- Maximum ambient temperature: 55°C
- For use in pollution degree 2 environments
- Use 60/70°C copper lines only
- Tightening torque for terminals: 0.5...0.6 Nm

Connect the terminals and sockets on the COM462RTU according to the wiring diagram.

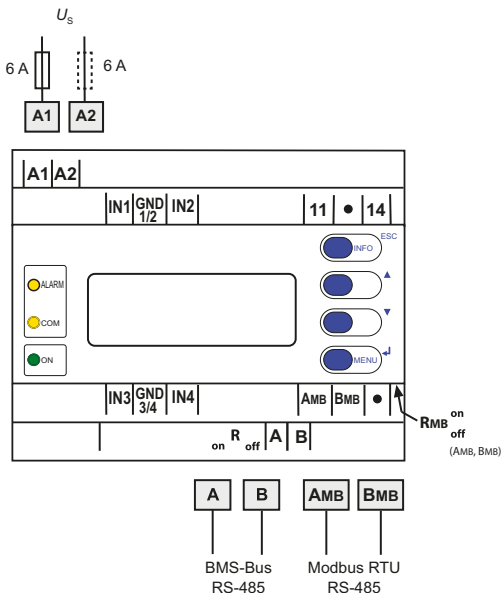

Terminal	Description
A1, A2	Connection to the supply voltage, 6 A fuse recommended, two-pole fuses should be used in IT systems. For UL and CSA applications, it is mandatory to use 5 A fuses.
A, B	Connection to the BMS bus (internal) with shielded cable (e.g. J-Y(St)Y 2x0.8).
AMB, BMB	Connection Modbus RTU with shielded cable (e.g. J-Y(St)2x0.8).
R <sub>on/off</sub> (A, B)	Switch for BMS bus termination. When the device is installed at the end of the bus, set the terminating switch to "on".
RMB <sub>on/off</sub> (AMB, BMB)	Switch for Modbus RTU termination. When the device is installed at the end of the bus, set the terminating switch to "on".
IN1, GND1/2, IN2	Currently has no function (digital inputs)
11, 14	Currently has no function (alarm relay K1)
IN3, GND3/4, IN4	Currently has no function (digital inputs)


## 4.5 Commissioning

1. Apply the supply voltage to the COM462RTU. The green "ON" LED lights up.
2. Set language and time.
3. Set the BMS bus. The COM462RTU is operated on the internal BMS bus.
4. Set the Modbus RTU.

For details about the settings, refer to the chapter "Settings on the device" on page 26.

## 5. Operation and configuration

### 5.1 Display and operating elements

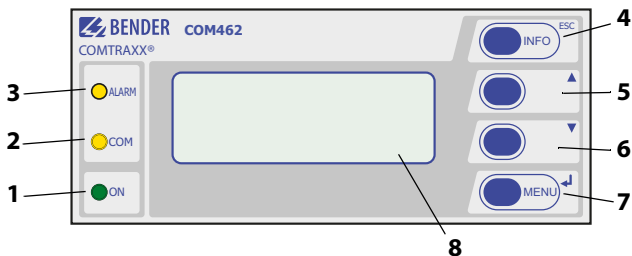

#### Legend

- 1 "ON" LED lights when supply voltage is applied.
- 2 "COM" LED lights when the gateway is responding to BMS requests.
- 3 "ALARM" LED, lights to signal an internal device error on the COM462RTU.
- 4 "INFO" button, to query the COM462RTU for device-specific information.  
"ESC" button to exit the menu function without changing parameters.
- 5 "▲" button: to move up in the menu, to increase values
- 6 "▼" button: to move down in the menu, to decrease values
- 7 "MENU" button for starting and exiting the menu.  
"↵" button to confirm parameter change.
- 8 LC display for standard and menu mode.

### 5.1.1 Automatic contrast setting for the display


The display contrast control is factory set to an optimum value. In exceptional cases, it may be necessary to adjust the contrast manually.

Press and hold the buttons "ESC" and "↵" simultaneously. All available contrast modes are continuously indicated in an infinite loop: minimum contrast, maximum contrast, no contrast (lasting some seconds), then the same cycle starts again. If the button "▼" is additionally pressed, the contrast modes will be displayed in the opposite direction.

Release the button as soon as the desired level of contrast is reached.

### 5.1.2 Display in standard mode

Network-related parameters will be indicated.

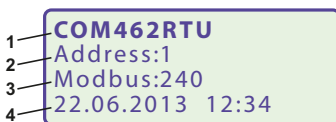


#### Legend

- |   |                                 |
|---|---------------------------------|
| 1 | Device type                     |
| 2 | BMS address of the COM462RTU    |
| 3 | Modbus address of the COM462RTU |
| 4 | Current date and time           |



### 5.1.3 Display in menu mode

Use the "MENU" button to switch to the Menu mode.



A blinking cursor supports menu navigation.

- You can access the individual menus by means of the "▲" or "▼" button.
- Press the "↵" button to confirm the selection of a menu or any setting you changed.
- To leave the respective menu level or discard a setting which is not confirmed yet, press the "ESC" button.



*Menu mode is exited if no button is pressed for longer than five minutes.*

Menu item	Function	Page
Exit	Exit menu mode	
1.Settings	Make the necessary settings for this device	26
2.Info	Display information on device type and firmware versions. The same information as indicated in the standard mode when pressing the "INFO" button.	28

## 5.2 Factory settings

All factory settings you will find in the table on page 26.

## 5.3 Settings on the device

The menu is divided into three levels. All menu items listed in the table can be called up via the main menu item "1. Settings" in the top menu level. All control buttons are explained on page 23.

### 5.3.1 Operating example: Setting BMS address

The following example shows the operating principle. All settings are carried out in the same way.

1. Press the "MENU" button on the COM462RTU
2. Select "1. Settings" > "1. Interface" > "1. Address". The factory-set BMS address will be displayed and can be changed now.
3. Modify the addresses using the button "▲" or "▼".
4. Confirm the modified BMS address with "↵".

Menu level 2	Menu level 3	Factory setting	Description
1. Interface	1. Address	2	Set the BMS address of COM462RTU: 1...99 (internal BMS bus)
	2. Interval	2 s	Set the cycle time 1...3s for the sequence: - Querying alarms in the BMS bus - Querying new bus devices - Offering the BMS master function
	3. Failure monitoring	5	Number of BMS bus cycles until a BMS device failure is signalled. The setting is only effective when the COM462RTU has the master function on the BMS bus (address 1). Adjustable cycles: 1...10

Menu level 2	Menu level 3	Factory setting	Description
2. Modbus	1. Address	2	Set the Modbus RTU address for COM462RTU: 2...247
	2. Baud rate	19200	Set the baud rate
	3. Parity	even	Set the parity
	4. Control	off	Switch on or switch off the control commands via Modbus
3. Language	1. English	Deutsch	Selection of the operating language
	2. Deutsch		
	3. Français		
4. Clock	1. Format	d.m.y	Date format: m-d-y/d.m.y
	2. Date	01.01.2010	Date
	3. Time	00:00	Time
	4. Summer-time	off	Select Central European Summer Time: off = Function switched off DST = Automatic switchover, USA, CDN CEST = Automatic switchover, Central Europe on = Set time zone +1 h
5. Password	1. Password	000	Enter/change password: 0...999
	2. Status	off	Enable/disable password protection for parameter setting via the buttons of the COM462RTU

Menu level 2	Menu level 3	Factory setting	Description
6. Service			For authorised Bender Service personnel only.

## 5.4 Display INFO list

Open the "INFO" menu:

- In standard mode: press the "INFO" button or
- In menu mode: select function "2. Info"

**COM462RTU**  
 Address:1  
 Device:B95061022  
 S:0123456789

This menu displays information about the device and the software. Navigate in the list using the "▼" resp. the "▲" button.

1. Name of the device
2. BMS address
3. Order number
4. Serial number
5. Software version
6. Manufacturer's address

Please have this information to hand if you need to contact us for assistance by telephone.

## 6. Data access using Modbus RTU protocol

Request to the COM462RTU are sent using the function code 0x03 (read several registers). The COM462RTU generates a function-related response and returns it.

### 6.1 Exception code

If a request cannot be answered for whatever reason, the COM462RTU sends a so-called exception code with which possible faults can be narrowed down.

Exception code	Description
0x01	Impermissible function
0x02	Impermissible data access
0x03	Impermissible data value
0x04	Slave device error
0x05	Acknowledgement of receipt (answer will be time-delayed)
0x06	Request not accepted (repeat request, if necessary)
0x08	Memory: Parity Error
0x0A	Gateway path not available
0x0B	Gateway error

## 6.2 Modbus requests

The required words of the process image can be read from the "Holding registers" in the COM462RTU using the function code 0x03. For this purpose, the start address and the number of the registers to be read out have to be entered. A complete bus image including all devices and device parameters is stored in these "Holding registers". This image represents the current statuses and values of up to 150 BMS devices for each monitored internal BMS bus. The operating manuals of the devices indicate which channel contains which information. Example: In the table below, Words 0 and 1 are to be read out from the "Holding registers" 0x100 and 0x101.

Byte	Name	Example
Byte 0	BMS address of the COM462RTU	0x02
Byte 1	Function code	0x03
Byte 2, 3	Start address	0x01 00
Byte 4, 5	Number of registers	0x00 02
Byte 6, 7	CRC16	0x12 34

## 6.3 Modbus responses

The responses consist of 2 bytes per register.

Byte	Name	Example
Byte 0	BMS address of the COM462RTU	0x02
Byte 1	Function code	0x03
Byte 2	Number of data bytes	0x04
Byte 3...6	Information	0xAB CD 01 23
Byte 7, 8	CRC16	0x12 34

## 6.4 Structure of the exception code

Byte	Name	Example
Byte 0	BMS address of the COM462RTU	0x02
Byte 1	Function code (0x03) + 0x80	0x83
Byte 2	Data	0x04
Byte 3, 4	CRC16	0x12 34

## 6.5 Modbus address structure for BMS devices

Function	Address range	Number of bytes	Number of words
Device type	0x00...0x09	20 bytes	10 words
Timestamp	0x0A...0x0D	8 bytes	4 words
Common alarm	0x0E (high byte)	1 byte	0.5 words
No BMS bus connection	0x0E (low byte)	1 byte	0.5 words
Unused	0x0F	2 bytes	1 word
Channel 1...32	0x10...0x8F	32 x 8 bytes	128 words
Alarm and test Channel 33...64	0x90...0xFC	218 x 8 bytes	109 words





## 7. Modbus process image in the memory of the COM462RTU

The device holds a process image in memory. This image represents the current statuses and values of up to 150 BMS devices for each monitored internal BMS bus.

### 7.1 Querying data

#### 7.1.1 Modbus function code

The memory in the COM462RTU can be read using the Modbus function 0x03 (read several registers). The volume of the queried data depends on the number of bytes selected in the Modbus client used. Up to 125 words (0x7D) can be read with a single query.

An individual addressable byte, such as the set bit for a saved common alarm, can also be read.

#### 7.1.2 How are the memory areas organised?

Memory utilisation	Start address	End of memory area	Size of memory area
Reference values for test purposes	0x0000	0x00FF	0x0100
Process image	0x0100	0x95FF	0x9500
Unused	0x96FF	0xFFFF	0x6900



*In some Modbus clients, an offset of 1 must be added to the register addresses.*

*Example: process image start address = 0x0101.*

---

The assignment of the memory addresses and the associated memory content is described below.

## 7.2 Memory scheme of the process image

### 7.2.1 BMS device address assignment on the Modbus

As illustrated in the table, the Modbus start address for the respective process image is derived from the BMS device address. 256 (0x100) Words or 512 bytes are reserved for each BMS device. They contain all the information requested and transmitted from the bus.

Modbus address ranges of the process images in the memory				
BMS Device address	Word			
	HiByte	LoByte		
		00	...	FF
1	0x01	Device 1		
2	0x02	Device 2		
3	0x03	Device 3		
...	...	...		
32	0x20	Device 32		
...	...	...		
150	0x96	Device 150		

Tab. 7.1: Modbus start address for each BMS device for which a request is to be sent.

## 7.2.2 Memory scheme of an individual BMS device

BMS devices feature various types of analogue and/or digital channels. Please take into consideration that there are device-specific differences:

- BMS devices usually feature 12 channels
- MK800/TM800 supports up to 64 digital channels in the master mode
- The channels 33 to 64 transmit digital messages only

Use the tables on page 35 and page 38 to determine the start address to request the following device parameters:

- Device type
- Timestamp
- Common alarm
- Device error
- BMS channel

Example:

In our example, channel 2 of the device with BMS address 3 is queried. How is the start address determined for querying the channel? In our example, the relevant cells in the table are marked bold.

1. The first address part 0x03 (HiByte) is applied from table 7.1 for BMS device address 3.
2. The second address part 0x14 (LoByte) is applied from table 7.2 for channel 2. Apply number 4 from the same table for the number of words to be queried: (0x14 to 0x17 = 0x04).
3. The start address 0x0314 is composed by HiByte and LoByte.

Memory image of a BMS device																																		
LoByte	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F																		
0x00	Device type ----- --										--- Time stamp ---			C	D	R.																		
0x10	Channel 1				Channel 2				Channel 3				Channel 4																					
0x20	Channel 5				Channel 6				Channel 7				Channel 8																					
0x30	Channel 9				Channel 10				Channel 11				Channel 12																					
0x40	Channel 13				Channel 14				Channel 15				Channel 16																					
0x50	Channel 17				Channel 18				Channel 19				Channel 20																					
0x60	Channel 21				Channel 22				Channel 23				Channel 24																					
0x70	Channel 25				Channel 26				Channel 27				Channel 28																					
0x80	Channel 29				Channel 30				Channel 31				Channel 32																					
0x90	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64		
0xA0	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.
0xB0	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.
0xC0	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.

0xD0	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.
0xE0	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.
0xF0	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.	R.

*Tab. 7.2: Modbus address assignment of the channels in a BMS device; Hex representation: horizontal = units, vertical = sixteens*

Abbreviations for memory contents:

C = Common alarm

D = Device lost (device failure)

R. = Reserved

A detailed description of the data formats for the device type, timestamp etc. is given below.

### 7.2.3 Device type

Word 0x00	0x01	0x02	0x03	0x04	0x05	0x06	0x07	0x08	0x09
ASCII text, 10 Words/20 bytes									

The device type is set by a BMS bus scan.

## 7.2.4 Timestamp

Word 0x0A		0x0B		0x0C		0x0D	
HiByte	LoByte	HiByte	LoByte	HiByte	LoByte	HiByte	LoByte
Year YY		Month MM	Day DD	Hour hh	Minute mm	Second ss	Reserve d

The timestamp is set according to a datagram received from a transmitting device.

## 7.2.5 Common alarm and device failure

C = Common alarm und D = Device lost (device failure)

Word 0x0E	
HiByte	LoByte
C	D
Common alarm, 1 byte: LSB = 0 or 1	Device error, 1 byte: LSB = 0 or 1

The common alarm bit is set as soon as an alarm status from the respective BMS device is detected.

The device error bit is set when communication with the respective BMS device is no longer possible.

## 7.2.6 Channels 1 to 32 with analogue and/or digital values

Word 0x00		0x01		0x02		0x03	
HiByte	LoByte	HiByte	LoByte	HiByte	LoByte	HiByte	LoByte
Floating point value (Float)				AT&T	R&U	Channel description	

Every analogue BMS device channel can contain alarm messages, operating messages, measured values, test messages and descriptive text. Both analogue and digital information can be transmitted.

AT&T = Alarm type and test type (internal/external)

R&U = Range and unit

For details on the channel description refer to chapter 7.4.

### 7.2.6.1 Float = Floating point value of the BMS channels

Bit	Byte	0x00										0x01																	
		HiByte					LoByte					HiByte					LoByte												
		31	30		24	23	22		16	15		8	7		0														
		S	E	E	E	E	E	E	E	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M	M

Presentation of the bit order for processing analogue measuring values according to IEEE 754

S = Sign

E = Exponent

M = Mantissa



### 7.2.6.2 AT&T = Alarm type and test type (internal/external)

Bit	7	6	5	4	3	2	1	0	Meaning
	Test external	Test internal	Status	Reserved	Reserved	Alarm	Errors		
Alarm type	X	X	X	X	X	0	0	0	No alarm
	X	X	X	X	X	0	0	1	Prewarning
	0	0	X	X	X	0	1	0	Device error
	X	X	X	X	X	0	1	1	Reserved
	X	X	X	X	X	1	0	0	Alarm (yellow LED), e.g. insulation fault
	X	X	X	X	X	1	0	1	Alarm (red LED)
	X	X	X	X	X	1	1	0	Reserved
	X	X	X	X	X	...	...	...	Reserved
	X	X	X	X	X	1	1	1	Reserved
Test	0	0	X	X	X	X	X	X	No test
	0	1	X	X	X	X	X	X	Internal test
	1	0	X	X	X	X	X	X	External test

The alarm type is coded by the bits 0 to 2. The bits 3 and 4 are reserved and always have the value 0. Bit 5 usually has the value 0 and represents the digital value of the status (this column is relevant for the SMI472 only).

Bit 6 or 7 is usually set when an internal or external test has been completed. Other values are reserved. The complete byte is calculated from the sum of the alarm type and the test type.

### 7.2.6.3 R&U = Range and unit

Bit	7	6	5	4	3	2	1	0	Meaning
Unit	X	X	X	0	0	0	0	0	Invalid (init)
	X	X	X	0	0	0	0	1	No unit
	X	X	X	0	0	0	1	0	Ω
	X	X	X	0	0	0	1	1	A
	X	X	X	0	0	1	0	0	V
	X	X	X	0	0	1	0	1	%
	X	X	X	0	0	1	1	0	Hz
	X	X	X	0	0	1	1	1	Baud
	X	X	X	0	1	0	0	0	F
	X	X	X	0	1	0	0	1	H
	X	X	X	0	1	0	1	0	°C
	X	X	X	0	1	0	1	1	°F
	X	X	X	0	1	1	0	0	Second
	X	X	X	0	1	1	0	1	Minute
	X	X	X	0	1	1	1	0	Hour
	X	X	X	0	1	1	1	1	Day
	X	X	X	1	0	0	0	0	Month
	X	X	X	...	...	...	...	...	Reserved
	X	X	X	1	1	1	1	0	CODE
		X	X	X	1	1	1	1	1
	X	X	X	...	...	...	...	...	Reserved
	X	X	X	1	1	1	1	1	Reserved

Bit	7	6	5	4	3	2	1	0	Meaning
Range of validity	0	0	X	X	X	X	X	X	Actual value
	0	1	X	X	X	X	X	X	The actual value is lower
	1	0	X	X	X	X	X	X	The actual value is higher
	1	1	X	X	X	X	X	X	Invalid value

The units of the bits 0 to 4 are coded.

Bits 6 and 7 describe the validity range of a value. Bit 5 is reserved.

The complete byte is calculated from the sum of the unit and the range of validity.

#### Caution!

If the unit byte refers to CODE, the recorded value or status will result in a text message. The content of this text message is listed in the table on page 45 or page 51. The floating point value contains an internal CODE but no valid measured value.

## 7.2.6.4 Channel description

Word	0x03																dezi- mal	Bedeutung														
	HiByte								LoByte																							
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0																
Byte	<b>Alarmer und Warnungen</b>																															
Bit	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	Reserviert
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	Isolationsfehler
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	2	Überlast
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	3	Übertemperatur
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	4	Ausfall Leitung 1
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	5	Ausfall Leitung 2
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	6	Isolation OP-Lampe
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	7	Reserviert
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	8	Ausfall Verteiler
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	9	Sauerstoff
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	10	Vakuum
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	11	Narkosegas
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	12	Druckluft 5 Bar
	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...	...

A code with the associated descriptive text is available for each channel. The table above only shows an extract from the texts. For a complete list of the available codes or texts refer to page 51.

### 7.2.6.5 Channel 33 to 64

Bit	7	6	5	4	3	2	1	0	Meaning
	Test external	Test internal	Status	Reserved	Reserved	Alarm	Errors		
Alarm type	X	X	X	X	X	0	0	0	No alarm
	X	X	X	X	X	0	0	1	Prewarning
	0	0	0	X	X	0	1	0	Device error
	X	X	X	X	X	0	1	1	Reserved
	X	X	X	X	X	1	0	0	Alarm (yellow LED), e.g. insulation fault
	X	X	X	X	X	1	0	1	Alarm (red LED)
	X	X	X	X	X	1	1	0	Reserved
	X	X	X	X	X	...	...	...	Reserved
	X	X	X	X	X	1	1	1	Reserved
Test	0	0	X	X	X	X	X	X	No test
	0	1	X	X	X	X	X	X	Internal test
	1	0	X	X	X	X	X	X	External test

The BMS channels 33 to 64 only provide digital information. The information is coded as an alarm or message type or test type (internal, external).

The coding is similar to the data format AT&T for the channels 1 to 32, with the exception of the additional bit 4, which is used for coding device errors, e.g. connection faults or internal device errors.

## 7.3 Reference data records of the process image

To make it easier to check the configuration and the Modbus RTU data access to BMS devices, COM462RTU provides a reference data record at the **virtual** BMS address 0.



*A real BMS device cannot have BMS address 0!  
Address 0 only serves to simulate data access.*

Special features of the Modbus communication are the byte offset and the word and byte order in the memory (Big Endian). At the end of this chapter, a few examples of correct configuration are given, which might be helpful.

### 7.3.1 Address assignment of the reference data record

As shown in the following table, the Modbus start address for access to the reference data record is derived from BMS device address 0.

		Modbus addresses for reference data record			
Virtual BMS Device address	Word	LoByte			
		00	0E	10	14
0	HiByte 0x00	Device type	Common Alarm	Channel 1	Channel 2

*Tab. 7.3: Start addresses for the reference data record query*

The start addresses provide the following reference values:

- 0x0000: TEST (device type)
- 0x000E: 1 (common alarm, LSB of the HiByte is set)
- 0x0010: 230 V undervoltage (reference value on channel 1)
- 0x0014: 12.34 A overcurrent (reference value on channel 2)

### 7.3.2 Reference value on channel 1

The following reference value is stored in this channel: 230.0 V undervoltage

Word 0x10		0x11		0x12		0x13	
HiByte	LoByte	HiByte	LoByte	HiByte	LoByte	HiByte	LoByte
0x43	0x66	0x00	0x00	0x00	0x04	0x00	0x4D
Floating point value (Float)				AT&T	R&U	Description	
230.0				No/No	Volt	Undervoltage	

Tab. 7.4: Reference data stored in channel 1



### 7.3.3 Reference value on channel 2

The following reference value is stored in this channel: 12.34 A

Word 0x14		0x15		0x16		0x17	
HiByte	LoByte	HiByte	LoByte	HiByte	LoByte	HiByte	LoByte
0x41	0x45	0x70	0xA4	0x00	0x03	0x00	0x4A
Floating point value (Float)				AT&T	R&U	Description	
12,34				No/No	Ampere	Overcurrent	

Tab. 7.5: Reference data stored in channel 2

### 7.3.4 Explanation of how to access floating point values

The test value 12.34 can be read out via Modbus RTU using Modbus function 0x03 at the address 0x0014. The test value has a size of 2 words.

Proceed as follows:

- Determine the correct byte offset  
Interpreting both words as unsigned integer values should result in the following values:  
Word 1 with address 0x14: unsigned integer value => 16709 (0x4145)  
Word 2 with address 0x15: unsigned integer value => 28836 (0x70A4)
- Determine the correct byte resp. word swap  
There are four different combinations of swapping. The only correct value is 12.34.  
All swapping combinations are represented in the following table.

Hex value sequence	Word 1		Word 2		Floating point value
	Byte 1	Byte 2	Byte 3	Byte 4	
<b>CORRECT</b>	<b>A 41</b>	<b>B 45</b>	<b>C 70</b>	<b>D A4</b>	<b>12.34</b>
Word swapping	C 70	D A4	A 41	B 45	4.066E+29
Byte swapping	B 45	A 41	D A4	C 70	3098.27
Word and byte swapping	D A4	C 70	B 45	A 41	-5.21E-17

## 7.4 Channel descriptions for the process image

Value	Measured value description alarm message/ operating message	Note
0		
1 (0x01)	Insulation fault	
2 (0x02)	Overload	
3 (0x03)	Overtemperature	
4 (0x04)	Failure line 1	
5 (0x05)	Failure line 2	
6 (0x06)	Insul. OP light	Insulation fault operating theatre light
7 (0x07)		
8 (0x08)	Failure distribution board	
9 (0x09)	Failure oxygen	
10 (0x0A)	Failure vacuum	
11 (0x0B)	Anaesthetic gas	
12 (0x0C)	Compressed air 5 bar	

<b>Value</b>	<b>Measured value description alarm message/ operating message</b>	<b>Note</b>
13 (0x0D)	Compressed air 10 bar	
14 (0x0E)	Failure nitrogen	
15 (0x0F)	Failure CO2	
16 (0x10)	Insulation UPS	Insulation fault UPS
17 (0x11)	Overload UPS	
18 (0x12)	Converter UPS	
19 (0x13)	UPS fault	
20 (0x14)	UPS emergency operation	
21 (0x15)	UPS test run	
22 (0x16)	Failure air conditioning	
23 (0x17)	Batt.op. OP-L	Battery-operated operating theatre light
24 (0x18)	Batt.op. OP-S	Battery-operated Sat OP light
25 (0x19)	Fail.norm.supply	Line normal power supply

<b>Value</b>	<b>Measured value description alarm message/ operating message</b>	<b>Note</b>
26 (0x1A)	Fail.safet.supply	Line safety power supply
27 (0x1B)	Failure UPS	Line additional safety power supply
28 (0x1C)	Ins.safety supply	
29 (0x1D)	Fail.N conductor	
30 (0x1E)	Short dist. panel	Short circuit distribution board
31 (0x1F)		
32 (0x20)		
33 (0x21)		
34 (0x22)		
35 (0x23)	Standby function	(Measuring function switched off (standby))
36 (0x24)		
37 (0x25)		
38 (0x26)	Batt.op. UPS	Battery operation, special safety power supply
39 (0x27)	Phase sequ. left	

Value	Measured value description alarm message/ operating message	Note
40 (0x28)	Failure UPS	Battery-supported safety power supply
41 (0x29)		
66 (0x42)		
67 (0x43)	Function test till:	Date
68 (0x44)	Service till:	Date
69 (0x45)	Ins.fault locat	Insulation fault location
70 (0x46)	Peak	Fault EDS system
71 (0x47)	Insulation fault	Insulation resistance in $\Omega$
72 (0x48)	Current	Measured value in A
73 (0x49)	Undercurrent	
74 (0x4A)	Overcurrent	
75 (0x4B)	Residual current	Measured value in A
76 (0x4C)	Voltage	Measured value in V

Value	Measured value description alarm message/ operating message	Note
77 (0x4D)	Undervoltage	
78 (0x4E)	Overvoltage	
79 (0x4F)	Frequency	Measured value in Hz
80 (0x50)		
81 (0x51)	Asymmetry	
82 (0x52)	Capacitance	Measured value in F
83 (0x53)	temperature	Measured value in °C
84 (0x54)	Overload	Measured value in %
85 (0x55)	Digital input	State 0 or 1
86 (0x56)	Insulation fault	Impedance
87 (0x57)	Insulation fault	Alarm from an insulation fault locator
88 (0x58)	Load	Measured value in %
89 (0x59)	Total Hazard Current	THC
90 (0x5A)	Inductance	Measured value in H

Value	Measured value description alarm message/ operating message	Note
97 (0x61)	Service code	Information about service intervals
101 (0x65)	Connection system	
102 (0x66)	Connection earth	
103 (0x67)	Short-circuit transformer	CT short circuit
104 (0x68)	No CT connected	
105 (0x69)	Short temp.sensor	Temperature sensor short-circuit
106 (0x6A)	Temp.sensor open.	Connection temperature sensor
107 (0x6B)	K1	Fault contactor K1
108 (0x6C)	K2	Fault contactor K2
109 (0x6D)		



<b>Value</b>	<b>Measured value description alarm message/ operating message</b>	<b>Note</b>
110 (0x6E)		
111 (0x6F)	No address:	Failure BMS device
112 (0x70)		
113 (0x71)	Failure K1/Q1	Failure contactor K1/Q1
114 (0x72)	Failure K2/Q2	Failure contactor K2/Q2
115 (0x73)	Device error	Fault ISOMETER
116 (0x74)	Manual mode	K1/2 manual mode
117 (0x75)	Open circuit K1 on	Line to K1 on interrupted
118 (0x76)	Open circ. K1off	Line to K1 off interrupted
119 (0x77)	Open circuit K2 on	Line to K2 on interrupted
120 (0x78)	Open circ. K2 off	Line to K2 off interrupted
121 (0x79)	K/Q1on	Fault
122 (0x7A)	K/Q1off	Fault
123 (0x7B)	K/Q2on	Fault
124 (0x7C)	K/Q2off	Fault
125 (0x7D)	Failure K3	

<b>Value</b>	<b>Measured value description alarm message/ operating message</b>	<b>Note</b>
126 (0x7E)	Q1	Fault
127 (0x7F)	Q2	Fault
128 (0x80)	No master	
129 (0x81)	Device error	
130 (0x82)		
131 (0x83)	Fault RS-485	
132 (0x84)		
133 (0x85)		
134 (0x86)		
135 (0x87)		
136 (0x88)		
137 (0x89)	Short circuit Q1	
138 (0x8A)	Short circuit Q2	
139 (0x8B)	CV460	CV460 fault
140 (0x8C)	RK4xx	Fault RK4xx

<b>Value</b>	<b>Measured value description alarm message/ operating message</b>	<b>Note</b>
141 (0x8D)	Address collision	BMS address has been assigned several times
142 (0x8E)	Invalid address	
143 (0x8F)	Several masters	
144 (0x90)	No menu access	
145 (0x91)	Own address	
201 (0xC9)	Line 1 normal op	
202 (0xCA)	Line 2 normal op	
203 (0xCB)	Switch. el. 1 on	
204 (0xCC)	Switch. el. 2 on	
205 (0xCD)		
206 (0xCE)	Auto mode	
207 (0xCF)	Manual mode	
208 (0xD0)		

<b>Value</b>	<b>Measured value description alarm message/ operating message</b>	<b>Note</b>
209 (0xD1)		
210 (0xD2)	Line AV on	
211 (0xD3)	Line SV on	
212 (0xD4)	Line UPS on	
213 (0xD5)	Channel disabled	
214 (0xD6)	switching back interlocking function	Switching back interlocking function enabled
215 (0xD7)	Phase sequ. right	
216 (0xD8)	Switch. el. pos.0	
217 (0xD9)	Line BSV on	
218 (0xDA)	On	SMO48x: Alarm, relay

To convert parameter data, data type descriptions are required. Text representation is not necessary in this case.

Value	Description of parameters
1023 (0x3FF)	Parameter/measured value invalid. The menu item of this parameter is not displayed.
1022 (0x3FE)	No measured value/no message
1021 (0x3FD)	Measured value/parameter inactive
1020 (0x3FC)	Measured value/parameter only temporarily inactive (e.g. during the transfer of a new parameter) Display in the menu "...".
1019 (0x3FB)	Parameter/measured value (value) unit not displayed
1018 (0x3FA)	Parameter (code selection menu) unit not displayed
1017 (0x3F9)	String max. 18 characters (e.g. device type, - variant, ...)
1016 (0x3F8)	
1015 (0x3F7)	Time
1014 (0x3F6)	Date: Day
1013 (0x3F5)	Date: Month
1012 (0x3F4)	Date: Year
1011 (0x3F3)	Register address (unit not displayed)
1010 (0x3F2)	Time

Value	Description of parameters
1009 (0x3F1)	Factor multiplication [*]
1008 (0x3F0)	Factor division [/]
1007 (0x3EF)	Baud rate

## 7.5 Modbus control commands

Commands can be sent to BMS devices by an external application (e.g. visualisation software).

Control via Modbus can be enabled or disabled in the browser menu "1. Settings" > "2. Modbus" > "4. Control".

### Command structure (example)

Example: system setup:

BMS addr. 1 COM460IP

BMS addr. 2 COM462RTU (Modbus addr. 2)

BMS addr. 4 IRDH275

Request:

Byte	Name	Example
Byte 0	Modbus address of the COM462RTU	02
Byte 1	Function code	10
Byte 2, 3	Start register	FC 00
Byte 4, 5	Number of registers	00 04
Byte 6	Number of bytes	08
Byte 7, 8	External address: must always be "1" for COM462RTU.	00 01
Byte 9, 10	The internal BMS address to which the command applies.	00 04
Byte 11, 12	Channel	00 00
Byte 13, 14	Control command	00 01
Byte 15, 16	CRC16 Checksum	84 86

Answer:

Byte	Name	Example
Byte 0	Modbus address of the COM462RTU	02
Byte 1	Function code	10
Byte 2, 3	Start register	FC 00
Byte 4, 5	Number of registers	00 04
Byte 6, 7	CRC16 Checksum	F1 A9

Register addresses for writing, function code write: 0x10

- 0xFC00: Ext. address.
- 0xFC01: Int. address.
- 0xFC02: Channel
- 0xFC03: Control command

Writing to register:

- Use the COM462RTU's address.
- Use function code 0x10 (write several registers).
- Start address in the register: 0xFC00
- Number of registers: 4
- Number of bytes: 8
- External address: must always be "1" for COM462RTU.
- The internal BMS address to which this control command applies.
- Channel number
- Control command
- CRC16 Checksum



Register addresses for reading. Function code read: 0x03

0xFC00: Ext. address.  
 0xFC01: Int. address.  
 0xFC02: Channel  
 0xFC03: Control command  
 0xFC04: Status

Reading out register:

- To read, use function code 0x03 (read several registers).

Possible response in "Status" register:

0	Busy	Processing command.
1	Error	An error has occurred.
2	Ready	Command has been processed successfully.

Control commands for the internal BMS bus:

Register Ext	Register Int	Register channel	Register control command	Function
1	1-150	0	1	Test Isometer
1	1-150	0	2	Test changeover device PRC
1	1-150	0	3	Start automatic test changeover 1->2. End after time T(test)
1	1-150	0	4	Start test generator without changeover

Register Ext	Register Int	Register channel	Register control command	Function
1	1-150	0	5	Switchover to line 1
1	1-150	0	6	Switchover to line 2
1	0	0	7	RESET alarm (broadcast)
1	0	0	8	RESET alarm EDS (broadcast)
1	1-150	0	9	Buzzer off [for alarm address] (BC)
1	1-150	1-12	10	Switch on relay/switch
1	1-150	1-12	11	Switch off relay/switch

## 8. Technical data

( ) \* = factory settings

### 8.1 Tabular data

#### Insulation coordination acc. to IEC 60664-1

Rated insulation voltage .....	AC 250 V
Rated impulse withstand voltage/pollution degree .....	4 kV/3

#### Supply voltage

Supply voltage $U_s$ .....	See ordering details
Frequency range $U_s$ .....	See ordering details
Power consumption .....	See ordering details

#### LED indicators

ALARM .....	internal device error
COM .....	data traffic BMS bus
ON .....	operation indicator

#### Interfaces

BMS bus internal:

Interface/protocol .....	RS-485/BMS bus internal
Operating mode .....	master/slave (slave)*
Baud rate BMS internal .....	9.6 kbit/s
Cable length .....	≤ 1200 m
Cable (twisted pairs, shielded, shield connected to PE on one side) .....	recommended: J-Y(St)Y 2x0.8
Connection, BMS internal .....	terminals A, B
Terminating resistor .....	120 Ω (0.25 W)
Device address, BMS bus internal .....	1 . . . 99 (2)*

Modbus RTU:

Interface/protocol .....	RS-485/Modbus RTU
Operating mode .....	slave
Baud rate Modbus RTU .....	9.6 . . . 57.6 kbit/s
Cable length .....	≤ 1200 m

Cable (twisted pairs, shielded, shield connected to PE on one side) .....	recommended: J-Y(St)Y 2x0.8
Connection, Modbus RTU .....	terminals D+, D-
Terminating resistor .....	120 Ω (0.25 W)
Device address, Modbus RTU .....	2...247 (2)*

## Environment/EMC

EMC .....	EN 61326-1
Classification of climatic conditions acc. to IEC 60721:	
Stationary use (IEC 60721-3-3) .....	3K5 (except condensation and formation of ice)
Transport (IEC 60721-3-2) .....	2K3
Long-term storage (IEC 60721-3-1) .....	1K4
Operating temperature .....	-10...+55 °C
Classification of mechanical conditions acc. to IEC 60721:	
Stationary use (IEC 60721-3-3) .....	3M4
Transport (IEC 60721-3-2) .....	2M2
Long-term storage (IEC 60721-3-1) .....	1M3

## Connection

Connection type .....	screw-type terminals
Connection properties:	
Rigid/flexible .....	0.2...4/0.2...2.5 mm <sup>2</sup> (AWG 24...12)
Multi-conductor connection (2 conductors with the same cross section):	
Rigid/flexible .....	0.2...1.5/0.2...1.5 mm <sup>2</sup>
Stripping length .....	8...9 mm
Tightening torque .....	0.5...0.6 Nm

## General data


Operating mode .....	Continuous operation
Mounting .....	display oriented
Degree of protection, internal components (IEC 60529) .....	IP30
Degree of protection, terminals (IEC 60529) .....	IP20
Type of enclosure .....	X460
Screw mounting .....	2 x M4
DIN rail mounting acc. to .....	IEC 60715
Flammability class .....	UL94V-0
Weight .....	≤ 310 g

## Option "W" data different from the standard version


Classification of climatic conditions acc. to IEC 60721:

Stationary use (IEC 60721-3-3) ..... 3K5 (condensation and formation of ice possible)

## 8.2 Dimension diagram

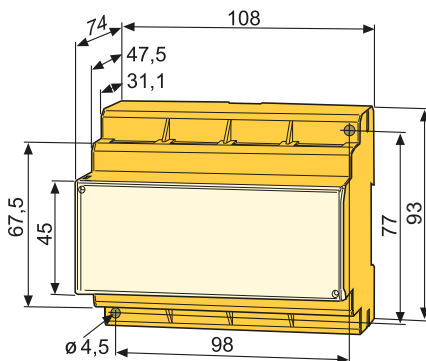

## 8.3 Standards, approvals, certifications





For information about UL applications refer to page 20.

## Other interface protocols

Connection to SCADA systems (Supervisory Control and Data Acquisition) and/or PLCs via OPC, BACnet or other protocols on request.

## 8.4 Ordering details

Type	Supply voltage/ frequency range $U_S$	Power consumption	 	Art. No.
COM462RTU BMS- Modbus RTU Gateway	AC/DC 76...276 V */ AC 42...460 Hz/DC  For UL application: $U_S$ AC = 76...250 V, 40...150 mA, 42...460 Hz $U_S$ DC = 76...250 V, 10...35 mA	3.5...40 VA, 2.4 W	<b>UL:</b> Approval available  <b>Lloyds:</b> Approval available	B 9506 1022
COM462RTUW BMS- Modbus RTU Gateway	AC/DC 76...276 V */ AC 42...460 Hz/DC	3.5...40 VA, 2.4 W	<b>Lloyds:</b> Approval available	B 9506 1022W

\* Absolute values

### Option W

Devices with the suffix "W" feature increased shock and vibration resistance. The electronics is covered with a special varnish to provide increased protection against mechanical stress and moisture. This particular feature permits the use in ships, on rolling stock and also in seismic environment.

---

## 9. Troubleshooting

### 9.1 Malfunctions

If the COM462RTU causes malfunctions in the connected networks, please refer to this operating manual.

#### 9.1.1 What should be checked?

Check whether...

- the device is supplied with the correct supply voltage.
- the BMS bus cable is correctly connected and terminated (120  $\Omega$ ).
- the Modbus RTU cable is correctly connected and terminated (120  $\Omega$ ).
- the BMS address is set correctly.
- The Modbus RTU address is correctly set and communicated to the master.

#### 9.1.2 Where to find help?

If, despite thorough study of the technical manual and intensive troubleshooting in your installation, you cannot rectify the fault related to the BMS-Modbus RTU gateway COM462RTU, please contact our Service department (refer to page 8).





# INDEX

## A

Address setting

- BMS address 26
- Modbus RTU address 27

Addressing 14

Application with an internal BMS bus 18

## B

BMS bus 11

BMS device address assignment on the  
Modbus 35

Button

- down 23
- INFO 23
- MENU 23
- UP 23

Byte offset 49

Byte or word swapping 49

## C

Clock setting 27

COM462RTU on the internal BMS bus 18

Commissioning 22

## D

Dimension diagram 69

Display and operating elements 23

Display in menu mode 25

Display in standard mode 24

## E

Exception code 29

## F

Factory settings 25

## I

Intended use 14

## L

LED

- ALARM 23
- COM 23

## M

Main menu 25

Malfunctions 71

Measured value descriptions for the process  
image, list 51

Memory image of a BMS device 37

Memory scheme of the process image 35

Menu overview of the functions adjustable  
at the device 26

Modbus

- Address structure for BMS devices 31
- control commands 63
- function code 33
- Process image 33
- requests 30

- responses 30

Work activities on electrical installations 13

Workshops 9

## **O**

Ordering details 70

## **P**

Process image 35

Product description 15

## **Q**

Quick-start guide 11

## **R**

Reference data records of the process image  
47

## **S**

Scope of delivery 15

Setting the date 27

Support 71

## **T**

Technical data 67

Termination 14

Termination of the BMS bus 21

Time setting 27

Training courses 9

Troubleshooting 71

## **U**

UL applications, restrictions 20

## **W**

Wiring diagram 20





**Bender GmbH & Co. KG**

P.O. Box 1161 • 35301 Grünberg • Germany  
Londorfer Str. 65 • 35305 Grünberg • Germany  
Tel.: +49 6401 807-0 • Fax: +49 6401 807-259  
E-mail: [info@bender.de](mailto:info@bender.de) • [www.bender.de](http://www.bender.de)

Photos: Bender archives.



**BENDER Group**